

*the Smart Kettle™*

SKE825



**Sage®**

- 3 Sage® recommends safety first
- 5 Know your Sage® product
- 6 Features of your Sage® product
- 7 Operating your Sage® product
- 8 Care & Cleaning

**At Sage® we are very safety conscious. We design and manufacture appliances with your safety foremost in mind. We also ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.**

## IMPORTANT SAFEGUARDS

**READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE**

- The full information book is available at [sageappliances.com](http://sageappliances.com)
- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Position the appliance at least 20cm from walls or heat/steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- This kettle is not intended to be operated by means of an

external timer or separate remote control system.

- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing. Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.
- Do not remove the kettle from the power base during operation. Ensure the kettle is switched to 'off' position after the water has boiled before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not overfill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.

## IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before operating.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance can be used by children aged 8 or older and persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Misuse may cause injury.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling and cleaning.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Sage Service Centre for examination and/or repair.

- Any maintenance other than cleaning should be performed at an authorised Sage Service Centre.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the off position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- The appliance and it's cord should be kept out of reach of children aged 8 years and younger.
- Cleaning of the appliance should not be carried out by

children unless they are 8 year or older and supervised.

- Do not use the appliance if power cord, power plug or appliance becomes damaged in any way. If damaged or maintenance other than cleaning is required, please contact Sage Customer Service or go to [sageappliances.com](http://sageappliances.com)



**WARNING**

***Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.***



The symbol shown indicates that this appliance should not be disposed of in normal household waste. It

should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts. Avoid spilling water onto the power base's connector

**SAVE THESE INSTRUCTIONS**

## KNOW YOUR SAGE® PRODUCT



- A. Removable scale filter
- B. Premium quality brushed stainless steel
- C. BPA Free\* dual water windows
- D. 1.7 litre/7 cup capacity
- E. 5 temperature settings
- F. BPA Free\* Soft opening lid with viewing window
- G. Stainless steel handle with lid release button
- H. START/CANCEL button
- I. 20 minute Keep Warm function
- J. Multi-directional cord-free power base with power cord storage.

### NOT SHOWN

Fast boil 2400W

Safety auto cut off

Boil dry protection

\*Sage® makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No. 10/2011.



### Rating Information

220-240V~ 50-60Hz 2000-2400W

## FEATURES OF YOUR SAGE® PRODUCT

### VARIABLE TEMPERATURE CONTROL

GREEN TEA	WHITE TEA	OOLONG TEA	COFFEE	BLACK TEA
80°C	85°C	90°C	95°C	100°C

#### NOTE

This product is not calibrated for commercial or scientific use. Temperatures may vary +/-3 °C degrees, being within range for optimal brewing for each type of tea or coffee.

### KEEP WARM FUNCTION

The Smart Kettle™ offers a convenient KEEP WARM function that can be used before, during or on completion of the water heating cycle. If the 100° button is selected when using the KEEP WARM function, the boiled water will remain at approximately 95° Celsius for 20 minutes.



To activate the KEEP WARM function, first press the desired water temperature button from the five options on the control panel. Then press the KEEP WARM button, followed by the START/CANCEL button to commence heating the water. Alternatively, the KEEP WARM button can be activated at any time during the heating cycle and/or within one minute after the heating cycle has completed.

If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.

## OPERATING YOUR SAGE® PRODUCT

### BEFORE FIRST USE

Remove and safely discard any packaging material or promotional labels attached to your kettle. It is recommended that before first use to fill the kettle to the maximum level, bring to the boil by selecting the BOIL 100° button, then discard the water.

### OPERATION OF YOUR KETTLE

1. Fill with the desired amount of water.

#### NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window.

2. Ensure the lid is closed and locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240 power outlet and switch on.

#### NOTE

If the START/CANCEL button is pressed (before selecting a temperature button), the START /CANCEL button surround will illuminate in red and the 100° button surround will illuminate and the kettle will start heating.

3. Select the desired temperature. The selected button and the START/CANCEL button surround will illuminate in white.
4. Press the START/CANCEL button. Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or the selected temperature has been reached before removing the kettle from the power base. If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.
5. When the kettle has heated the water to the selected temperature, 3 beeps will sound.
6. If the KEEP WARM function has been selected, the KEEP WARM button surround will remain illuminated in red, the selected temperature button surround will remain illuminated in white, and the kettle will maintain the desired setting for 20 minutes.

### SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating. Switch Off at the power point and allow kettle to cool before refilling. The safety device will automatically reset when the kettle has cooled down.

Always switch off at the power outlet and unplug the appliance from the power outlet before cleaning.

### REMOVABLE FILTER

The Smart Kettle™ features a removable mesh filter to remove scale deposits for cleaner water. To clean the scale deposits from the filter, remove the filter by opening the lid and sliding the filter up and out of the kettle.

The filter can be cleaned by placing under running hot water and rubbing with a cleaning cloth or brush. To replace the filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.

#### NOTE

The filter could become damaged with time, so please check regularly and replace if found damaged.

## CARE & CLEANING

### DESCALING

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time.

We recommend the use of Sage® “the Descaler” to remove scale build up and stains.

To order, visit [www.sageappliances.com](http://www.sageappliances.com)

### DIRECTIONS FOR USE

1. Empty 1 sachet (25g) into 1L of warm water. Stir to dissolve.
2. Pour into kettle.
3. Leave stand for 5 minutes.
4. After 5 minutes, discard the solution.
5. Rinse the kettle twice with fresh clean water.

### TO CLEAN THE EXTERIOR

The outside of the kettle should be wiped with a damp cloth then polished with a soft, dry cloth.

#### NOTE

Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.

### STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure that the lid is closed and locked securely into place. Wrap the power cord around the power cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



**Freephone (UK Landline): 0808 178 1650**  
**Mobile Calls (National Rate): 0333 0142 970**

**[www.sageappliances.co.uk](http://www.sageappliances.co.uk)**  
**[customerservice@sageappliances.co.uk](mailto:customerservice@sageappliances.co.uk)**

### **Register your product and get more from your purchase**

Product registration takes only a few minutes and ensures a record of your purchase. Registration also makes it easier to get support and advice on any questions or issues that you might have in the future. If you wish, we can also send you free recipes and additional hints and tips on making the best of your appliance.

➤ Go to [www.sageappliances.co.uk](http://www.sageappliances.co.uk) and click on 'Product Registration.'

### **What's on your mind?**

Our constant aim is to improve the quality and features of our appliances. We welcome your comments and ideas in assisting our ongoing development.

➤ Go to [www.sageappliances.co.uk](http://www.sageappliances.co.uk) and click on 'Support.'



Registered in England & Wales No. 8223512. Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

Copyright BRG Appliances 2017.

SKE825